



## DOP-107WVCS

High Color • Widescreen •

User-Friendly HMI Products

Delta Electronics Inc,

No.18, Xinglong Rd., Taoyuan City 33068, Taiwan

# Instruction Sheet

## (1) Preface

Thank you for purchasing DOP-107WV. This instruction sheet provides information about DOP-107WV. Before using the product, please read through this manual carefully in order to ensure the correct use of the product. In addition, please place this manual safely for quick reference whenever is needed. Please follow the rules below if you have not finished reading this manual yet.

- Before operate the touch panel, please remove the film of HMI.
- Install the product in a clean and dry location free from corrosive and inflammable gases or liquids, indoor use only.
- Ensure that all wiring instructions and recommendations are followed.
- Ensure that HMI is correctly connected to the ground. The grounding method must comply with the national electrical standard (Please refer to NFPA 70: National Electrical Code, 2005 Ed.
- Do not modify the wiring or disassemble HMI interface when HMI is connected to the power.
- Do not touch the power supply during operation. Otherwise, it may cause electric shock.
- When HMI displays low power notification and requires battery changes, please contact local distributors or DELTA customer service center for the replacement. Do not change batteries by yourself.
- DOP-100 series can be used for industrial automation equipment. Please read through this manual carefully and install the product according to the instructions in order to avoid danger.
- Cleaning method: Please use dry cloth to clean the product.
- The product should be used at an altitude below 5000 m.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- For repairing and maintenance, please contact DELTA Electronics, Inc. Address: No.18, Xinglong Rd., Taoyuan City, Taiwan. TEL: +886-3-3626301.

If you have any enquiry during operation, please contact our local distributors or Delta sales representatives. The content of this instruction sheet may be revised without prior notice. Please consult our distributors or download the latest version at <https://www.deltaww.com/zh-tw/index>.

## (1) Précautions générales (FR)

Merci d'avoir acheté ce produit. Cette fiche d'instructions fournit des informations pour les IHM de la série DOP-107WVCS. Avant d'utiliser ce produit, lisez attentivement cette fiche d'instructions pour assurer une utilisation correcte du produit. Gardez cette fiche à portée de main pour pouvoir vous y référer rapidement en cas de besoin. Avant de terminer la lecture de cette fiche, suivez ces instructions :


- Installez le produit dans un environnement exempt de vapeur, de gaz corrosifs et de gaz inflammables.
- Reportez-vous au schéma de câblage pour le raccordement des fils.
- Assurez-vous que ce produit est correctement mis à la terre. La méthode de mise à la terre doit être conforme aux directives des normes électriques nationales (voir NFPA 70 : National Electrical Code (Code électrique national), 2005 Ed.).
- Ne démontez pas l'IHM et ne changez pas le câblage, lorsque l'appareil est sous tension.
- Ne touchez pas à l'alimentation électrique lorsque l'appareil est sous tension, cela pourrait provoquer un choc électrique.
- Lorsque l'IHM affiche une information d'alimentation faible et nécessite un changement de batterie, contactez votre distributeur local ou le centre de service clientèle Delta pour le remplacement. Ne changez pas vous-même les batteries.
- Ce produit peut être utilisé avec d'autres équipements d'automatisation industrielle. Lisez attentivement cette fiche et installez le produit conformément aux instructions pour éviter tout danger.
- Méthode de nettoyage : nettoyez le produit à l'aide d'un chiffon sec.
- Utiliser ce produit à une altitude inférieure à 5 000 m (6,561.68 ft).
- Si l'équipement est utilisé d'une manière non spécifiée par le fabricant, la protection fournie par l'équipement risque d'être compromise.
- Pour les réparations et l'entretien, contactez Delta Electronics, Inc. Adresse : No. 18, Xinglong Rd., Taoyuan City, Taiwan. TÉL : +886-3-3626301.

Si vous avez des questions concernant le fonctionnement du programme, contactez nos distributeurs locaux ou le centre de service clientèle Delta. La fiche d'instructions peut être révisée sans préavis. Contactez nos distributeurs ou téléchargez la dernière version sur le site web de Delta à l'adresse <https://www.deltaww.com/>.

## (2) Communication Port Pin Assignment

### DOP-107WVCS COM1

COM Port	Pin	MODE1
		RS-232
	1	
	2	RXD
	3	TXD
	4	
	5	GND
	6	
	7	RTS
	8	CTS
	9	

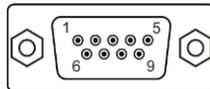


### DOP-107WVCS COM2

COM Port	Pin	MODE1		MODE2		MODE3	
		COM2	COM3	COM2	COM3	COM2	COM3
		RS-232	RS-485	RS-485	RS-485	RS-232	RS-422
	1			D+			TXD+
	2	RXD				RXD	
	3	TXD				TXD	
	4		D+		D+		RXD+
	5	GND		GND		GND	
	6			D-			TXD-
	7	RTS				RTS	
	8	CTS				CTS	
	9		D-		D-		RXD-

Note 1: Blank means connection is not required.


## (3) Part names

### DOP-107WVCS (Front View)

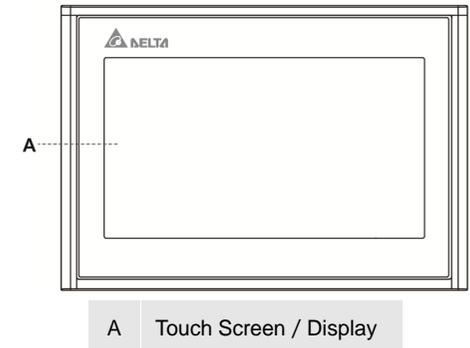

A Touch Screen / Display


### DOP-107WVCS (Rear View)

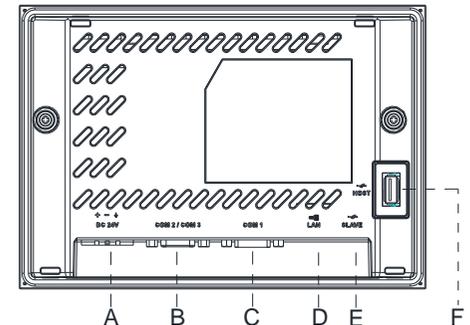

A	Power Input (24AWG wire min.)	B	COM2/ COM3
C	COM1	D	Network Port ( LAN )
E	USB Slave	F	USB Host

#### (4) Dimensions for Installation

##### DOP-107WVCS

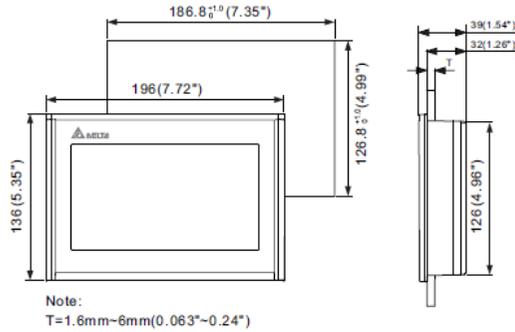

Operation Temperature is  $-30^{\circ}\text{C} \sim +70^{\circ}\text{C}$

Storage Temperature is  $-40^{\circ}\text{C} \sim +80^{\circ}\text{C}$

#### (5) Installation and Wiring

##### Installation Notes:

- Improper installation will result in malfunction and greatly reduce the life of the HMI. Be sure to follow the guidelines in this quick start when installing the HMI.
- In order to ensure the HMI being well ventilated, make sure that the ventilation holes are not obstructed and provide sufficient clearance for the HMI.
- To protect the panel, be sure to install a waterproof gasket into HMI.
- For use on a flat surface of a Type 4X enclosure or equivalent. If Enclosure with lower type rating will cause de-rating.
- The allowable thickness of the panel for mounting should be less than 5 mm (0.2 inches) .

##### (5) Installation et câblage (FR)


##### Précautions :

- Un sens d'installation incorrect peut entraîner un dysfonctionnement.
- Pour une bonne ventilation et un refroidissement optimal, laissez un espace suffisant entre l'HMI et les objets ou les parois adjacentes, une surchauffe peut entraîner un dysfonctionnement de l'appareil.
- Ce produit doit être utilisé sur des boîtiers de type 4X fabriqués pour une utilisation en intérieur.
- L'épaisseur maximale du panneau pour le montage ne doit pas dépasser 5 mm (0,2 pouce).
- Utilisez des fils de cuivre.

##### Installation Method:


###### Step 1:

Put the waterproof gasket into HMI and then insert the HMI into the panel cutout.

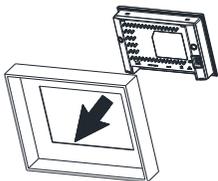


###### Step 2:

Place the fasteners into slots and tighten the screws till reaching the panel cutouts.

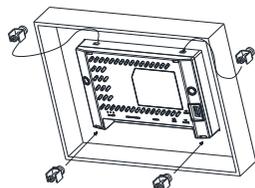


###### Step 3:

Tighten the screws with torque less than 0.5N-M / 0.7N-M to avoid damage to the plastic case. DOP-107 Torque: 6.17 lb-inch (0.7N-M)

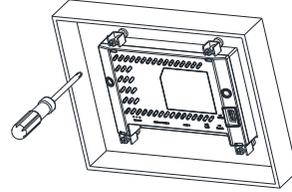

###### Step 4:

For heat dissipation, keep a minimum clearance of 60 mm (2.36 inches) and 45 mm (1.77 inches) respectively on the rear and bottom of the HMI.

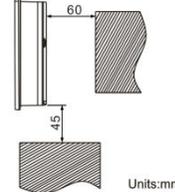


Recommended wiring is as follows:

Type	Material	Wire Gauge (AWG)	Stripped length	Torque
Solid	Copper	24 ~ 12	7 ~ 8 mm	5 kg-cm (4.3 lb-in)
Stranded	Copper	24 ~ 12	7 ~ 8 mm	5 kg-cm (4.3 lb-in)



Be sure to perform wiring by referring to the following figure (power supply connector), wiring must be rated  $75^{\circ}\text{C}$  min

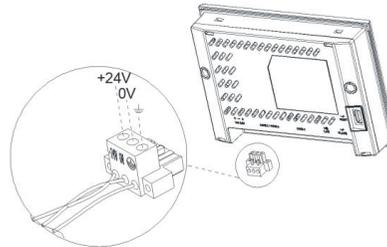

#### (6) Specifications

Model	DOP-107WVCS	
LCD Module	Display Type	7" TFT LCD (65535 colors)
	Resolution	800 x 480 pixels
	Backlight	LED Back Light (less than 20,000 hours half-life at $25^{\circ}\text{C}$ ) (Note 1)
	Display Size	154.08 x 85.92 mm
Brightness	1000 cd/m <sup>2</sup> (Typ.)	
CPU	ARM Cortex-A8 (1GHz)	
Flash ROM	1000 Mbytes	
RAM	1000 Mbytes	
Touch Screen	4-wire resistive touch screen > 10,000,000 operated	
Buzzer	Multi-Tone Frequency (2 K ~ 4 K Hz) / 80 dB	
Ethernet Interface	10/100 Mbps Auto sensing (with built-in isolated power circuit (Note 2))	
USB	1 USB Slave Ver 2.0 1 USB Host Ver 2.0	

SD		N/A
Serial Communication Port	COM1	RS-232 (supports flow control) (Note 2)
	COM2	RS-232 (supports flow control) / RS-485 (Note 2)
	COM3	RS-422 / RS-485 (Note 2)
Perpetual Calendar	Built-in	
Cooling Method	Natural cooling	
Safety Approval	CE / UL (Please use shielding Ethernet cable and the magnetic ring with filter of 300 ohm/100 MHz)	
Waterproof Level of Panel Display	IP 66/NEMA 4/Type 12/Type 4X (indoor and outdoor use)	
Operation Voltage (Note2)	+24 V <sub>DC</sub> (-15% ~ +20%) (with built-in isolated power supply unit) Supplied by Class 2 or SELV circuit (isolated from MAINS by double insulation)	
Voltage Endurance	500 V <sub>AC</sub> for 1 minute (between charging (DC24V terminal) and FG terminals)	
Power Consumption (Note 2)	8.4W (Max) (Note 3)	
Backup Battery	3V lithium battery CR2032 x 1	
Backup Battery Life	About 3 years or more at $25^{\circ}\text{C}$ but subjects to the temperature and the conditions during usage.	
Operation Temperature	$-30^{\circ}\text{C} \sim +70^{\circ}\text{C}$	
Storage Temperature	$-40^{\circ}\text{C} \sim +80^{\circ}\text{C}$	
Operating Environment	10% ~ 90% RH [0 ~ $40^{\circ}\text{C}$ ], 10% ~ 55% RH [41 ~ $50^{\circ}\text{C}$ ], 10% ~ 20% RH [51 ~ $70^{\circ}\text{C}$ ]; Pollution degree: 1	
Storage Environment	10%~95%RH [0~ $40^{\circ}\text{C}$ ] , 10%~55%RH [41~ $50^{\circ}\text{C}$ ] , 10%~20%RH [51~ $80^{\circ}\text{C}$ ]	
Vibration Resistance	Conforms to IEC61131-2; Continuous: 5 Hz ~ 8.3 Hz 3.5 mm, 8.3 Hz ~ 150 Hz 1 G	
Shock Resistance	Conforms to IEC60068-2-27: 11 ms, 15 G Peak , X, Y, Z direction for 6 times	
Dimension (W) x (H) x (D) mm	196 x 136 x 39	
Dimension for Installation (W) x (H) mm	186.8 x 126.8	
Weight	Approx. 560 g	

##### Note:

- The half-life of backlight is defined as original luminance being reduced by 50% when the maximum driving current is supplied to HMI. The life of LED backlight shown here is an estimated value under  $25^{\circ}\text{C}$  normal temperature and humidity conditions.
- The withstand voltage of the isolated power circuit is 1500 V peak for 1 minute.
- Power consumption of HMI is the power consumed when not connecting to any peripheral devices. To ensure normal operation of HMI, the recommended power supply is: power consumption x 1.5 ~ 2.
- Isolated power supply is recommended.
- DOPSoft, the program editor for DOP-100 series products and user manuals can be downloaded at our website. In addition, the content of this instruction sheet may be revised without prior notice. Please consult our distributors or download the latest version at <https://www.deltaww.com/zh-tw/index>.
- DOP-100 series can be used for industrial automation equipment. Please read through this manual carefully and install the product according to the instructions to avoid danger.